Usb Burning Method on RK3288_

Driver Download link:

https://mega.nz/file/p6pCVQSY#hq251ZW46uJAhBPCzLbvf6FIGg74Caim6zdvyQOi2d8

Tools Download link:

https://mega.nz/file/Ez4UwSIC#9MeZmbYQBhFHYVjqHbKcMrFHUkKCJ5ThWiXjql5kabg

Upgrade Steps:

- 1. Unzip the Driver file DriverAssitant_v4.5.zip on your PC, and run DriverInstall.exe;
- 2. Unzip AndroidTool_v2.71_burn_tool.zip on your PC, open the config.ini file and modify the

value of Selected to 2 :

ì	名称	修改日期	类型	大小	
l	퉬 bin	2017/11/15 18:12	文件夹		
	🌗 Language	2017/11/15 18:12	文件夹		
	🌗 Log	2019/3/21 12:28	文件夹		
	🐌 Output	2018/12/19 17:28	文件夹		
	퉬 Output_	2018/12/19 16:59	文件夹		
	🔀 AndroidTool.exe	2017/11/15 18:12	应用程序	1,076 KB	
	Android开发工具手册.pdf	2017/11/15 18:12	看图王 PDF 文件	1,507 KB	
	config.cfg	2019/3/15 11:28	CFG 文件	8 KB	
	🗑 config.ini	2019/2/28 16:04	配置设置	2 KB	
	config.null.std.cfg	2019/3/15 11:27	CFG 文件	8 KB	
L	🗋 config.origin.cfg	2017/11/15 18:12	CFG 文件	8 KB	
	🧊 config.ini - 记事本				
	文件(F) 编辑(E) 格式(O) 查看(V) 帮助(H)			
	文件(F) 编辑(E) 格式(O) 查看(V) 帮助(H #洗择工具语言·Selected=1(中文)·S)) elected=2(英文)	Fnglish		
	文件(F) 编辑(E) 格式(O) 查看(V) 帮助(H #选择工具语言:Selected=1(中文);S)) elected=2(英文)	English		
J	文件(F) 编辑(E) 格式(O) 查看(V) 帮助(H #选择工具语言:Selected=1(中文);S [Language] Kinds=2)) elected=2(英文)	English		
	文件(F) 编辑(E) 格式(O) 查看(V) 帮助(H #选择工具语言:Selected=1(中文);S [Language] Kinds=2 Selected=2)) elected=2(英文)	English		
	文件(F) 编辑(E) 格式(O) 查看(V) 帮助(H #选择工具语言:Selected=1(中文); [Language] Kinds=2 Selected=2 LangPath=Language\)) elected=2(英文)	English		
	文件(F) 编辑(E) 格式(O) 查看(V) 帮助(H #选择工具语言:Selected=1(中文);S [Language] Kinds=2 Selected=2 LangPath=Language\) elected=2(英文)	English		
	文件(F) 编辑(E) 格式(O) 查看(V) 帮助(H #选择工具语言:Selected=1(中文); [Language] Kinds=2 Selected=2 LangPath=Language\ Lang1File=Chinese.ini)) elected=2(英文)	English		
	文件(F) 编辑(E) 格式(O) 查看(V) 帮助(H #选择工具语言:Selected=1(中文); [Language] Kinds=2 Selected=2 LangPath=Language\ Lang1File=Chinese.ini Lang1FontName=宋体) elected=2(英文)	English		
	文件(F) 编辑(E) 格式(O) 查看(V) 帮助(H #选择工具语言:Selected=1(中文);S [Language] Kinds=2 Selected=2 LangPath=Language\ Lang1File=Chinese.ini Lang1FontName=宋体 Lang1FontSize=9) elected=2(英文)	English		
·	文件(F) 編辑(E) 格式(O) 查看(V) 帮助(H #选择工具语言:Selected=1(中文); [Language] Kinds=2 Selected=2 LangPath=Language\ Lang1File=Chinese.ini Lang1FontName=宋体 Lang1FontSize=9) elected=2(英文)	English		
· · · · · · · · · · · · · · · · · · ·	文件(F) 編辑(E) 格式(O) 查看(V) 帮助(H #选择工具语言:Selected=1(中文); [Language] Kinds=2 Selected=2 LangPath=Language\ Lang1File=Chinese.ini Lang1FontName=宋体 Lang1FontSize=9 Lang2File=English.ini) elected=2(英文)	English		
	文件(F) 编辑(E) 格式(O) 查看(V) 帮助(H #选择工具语言:Selected=1(中文); [Language] Kinds=2 Selected=2 LangPath=Language\ Lang1File=Chinese.ini Lang1FontName=宋体 Lang1FontSize=9 Lang2File=English.ini Lang2FontName=Arial) elected=2(英文)	English		
. 形:: 形	文件(F) 編辑(E) 格式(O) 查看(V) 帮助(H #选择工具语言:Selected=1(中文); [Language] Kinds=2 Selected=2 LangPath=Language\ Lang1File=Chinese.ini Lang1FontName=宋体 Lang1FontSize=9 Lang2File=English.ini Lang2FontName=Arial Lang2FontSize=9) elected=2(英文)	English		

3. Run AndroidTool.exe under the "AndroidTool_Release_v2.71" folder, and select firmware:

KLDevTool v2.71	—	×
RKDevTool v2.71 Download Image Upgrade Firmware Advanced Function Firmware Upgrade Switch EraseFlash Pw Ver: Loader Ver: Chip Info: Firmware:	_	×
No Devices Found		

KDevTool v2.71	—	×
Download Image Upgrade Firmware Advanced Function		
Firmware Upgrade Switch EraseFlash		
Fw Ver: 7.1.00 Loader Ver: 1.15 Chip Info: RK330C		
Firmware: C:\Users\Administrator\Desktop\update.img		
No Devices Found		

4. Do not plug in power, press and hold the update button, connect your PC and the box through the Type-C data cable, then plug-in power-adapter, (then turn on the power switch if the box has it), hold the button for 5-10 seconds until appear "Found One LOADER Device" in the tool, see the pictures below:





<image/> <image/> <image/>
Download Image Upgrade Firmware Advanced Function
Firmware Upgrade Switch EraseFlash
FW Ver: 7.1.00 Loader Ver: 1.15 Chip into: KASSOL
Found One LOADER Device

4. Click "Upgrade" and the upgrade details will be displayed on the right, when the upgrade is complete, the box will restart automatically:

🔀 RKDevTool v2.71	–
Download Image Upgrade Firmware Advanced Function Firmware Upgrade Switch EraseFlash Fw Ver: 7.1.00 Loader Ver: 1.15 Chip Info: RK330C Firmware: C:\Users\Administrator\Desktop\update.img	Test Device Start Test Device Success Check Chip Start Check Chip Start Get FlashInfo Start Get FlashInfo Success Prepare IDB Success Download IDB Success Download IDB Success Download Firmware Start Download Firmware Start Download Firmware Success Reset Device Start Reset Device Success
No Devices Found	

Q & A:

Q: Can not connect to the PC via USB cable?

A:1.Please confirm whether it is a USB data cable, not a charging cable.

2.Please can't plug in power first, press and hold the update button first, connect your PC and

the box through the USB data cable, then plug-in power-adapter, (then turn on the power switch

if the box has it), hold the button for 5-10 seconds;

3.If none of the above works, please change a PC,or USB cable,or change a USB port on PC;

Q: Appear "Found One MASKROM Device" in the tool,not "Found One LOADER Device" ?

A: Please click the EraseFlash option, waiting for completion, and then click "Upgrade" option...

Q: The update fail details has displayed on the right, not device Success?

A:1.Please try to download the firmware again,or check the MD5 value of the firmware with the provider;

2.Please change a type-C cable to retry,or change the USB port on the PC,preferably USB3.0,or change a PC to retry.